

Högklint


Intro

Högklint is a flexible shelving system that comes in two standard heights; 229 and 103 cm (including legs, with plinth 7 cm lower). The length of the unit is achieved by combining sections of 44/42 or 86/84 cm. The unit can be extended with one or more sections at any time. Put a personal touch to your unit by adding shelves, dividers, glass doors, drawers and slanted magazine shelves. Choose base; legs or plinth. Furthermore you can choose to have doors or drawers painted in your favorite colour.


Outline

This is a general manual for all types of Högklint. Follow the instructions applicable to your unit! Start by arranging all the pieces, all movable shelves and dividers can be put to the side for now. The frame will first be screwed together section by section, then the decorative top will be attached (if any) and last the base (legs or plinth). Below is a list of all components:


- A. Screw for plinth/legs 40 mm
- B. Screw for decorative top 30 mm
- C. Screw for angle bracket and hinge 15 mm
- D. Nails for back piece 15 mm
- E. Wooden dowel 30 mm
- F. Cam dowel screw
- G. Cam lock
- H. Shelf support for magazine shelf
- I. Angle bracket
- J. Shelf support
- K. Hinge

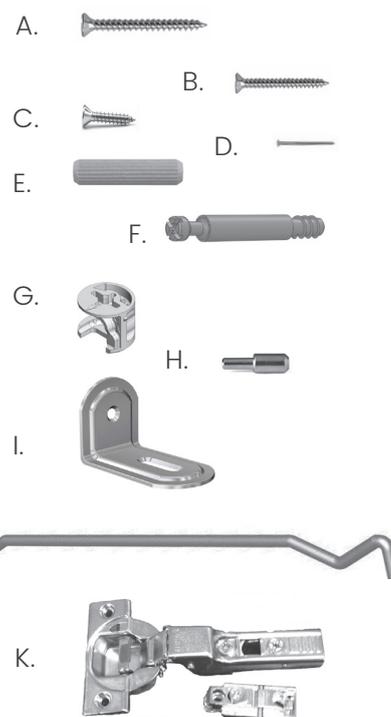


Top 40, high

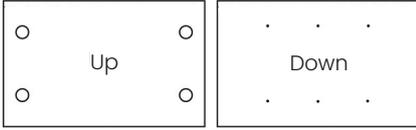


Top 80, high

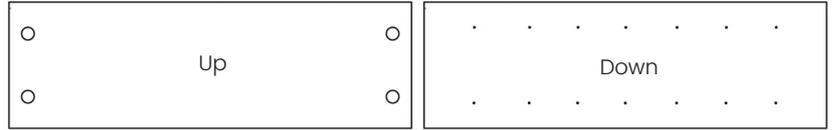


Top 40, low

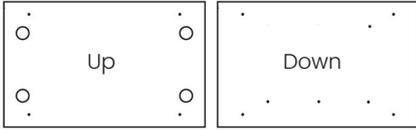


Top 80, low

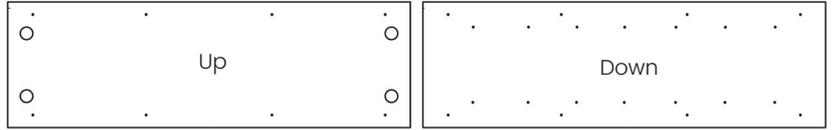


Fixed shelf 40 (high)

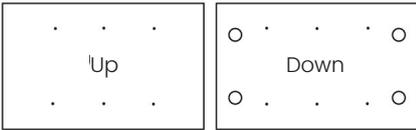


Fixed shelf 80 (high)

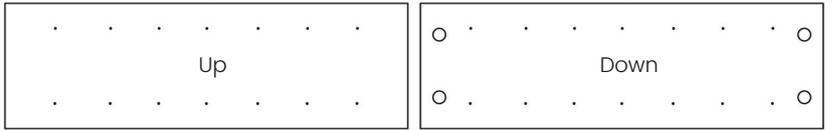


Bottom 40

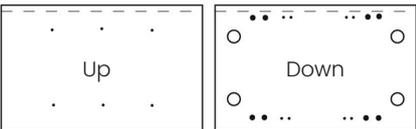


Bottom 80

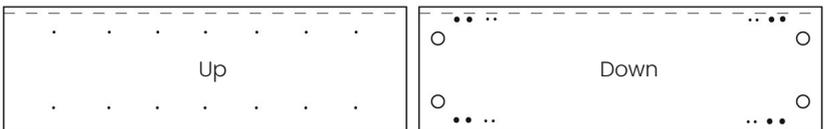


Movable shelves/dividers

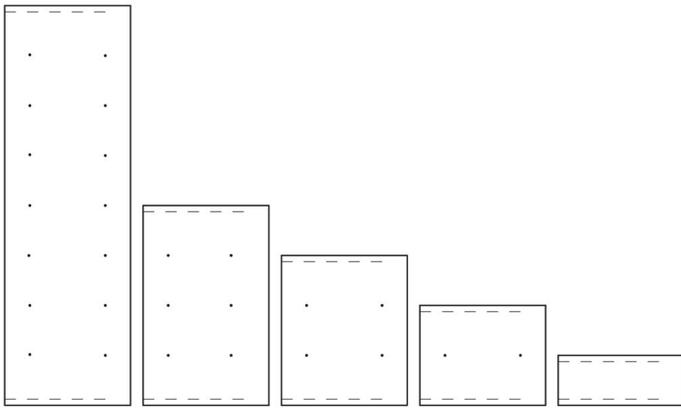

Left side piece, low

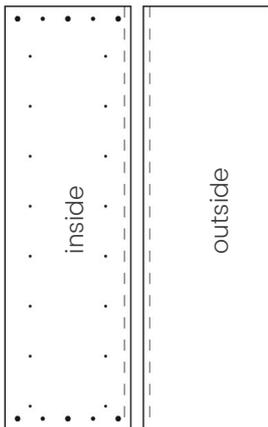


Right side piece, low

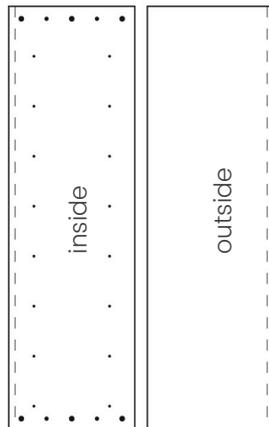


Middle piece, low




Left side piece, high

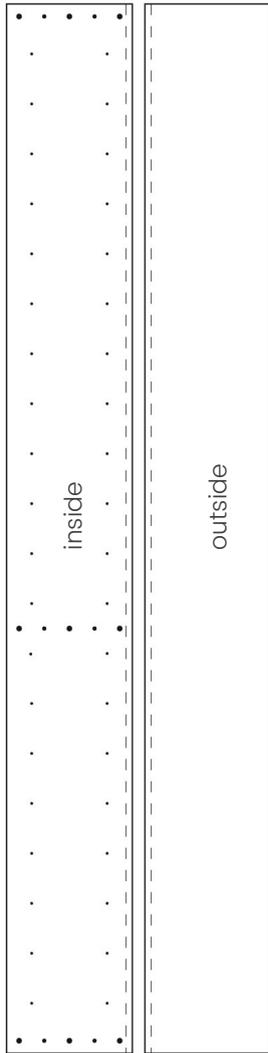

Right side piece, high

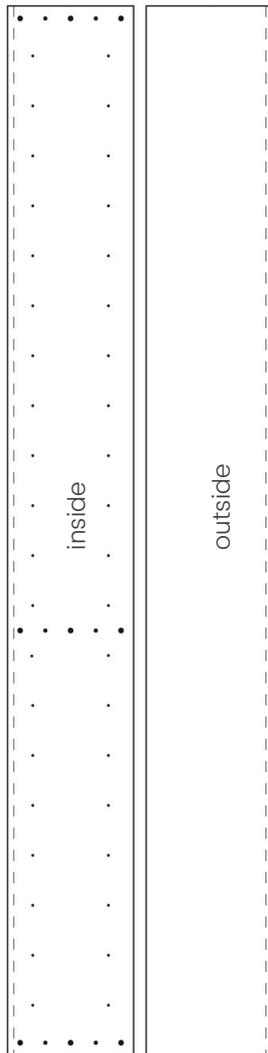




Middle piece, high

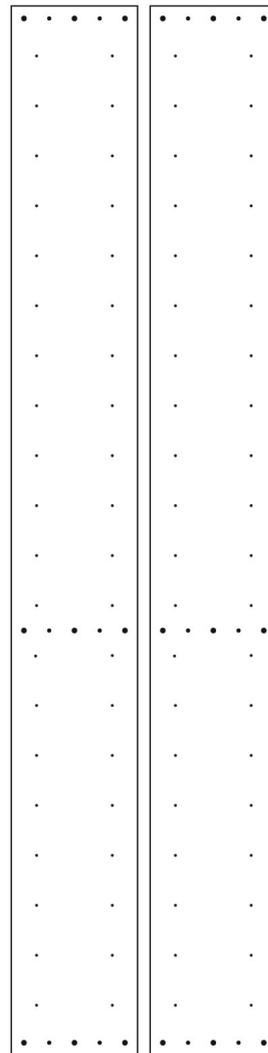

Step by step




1. Make sure you have all pieces.
2. The shelf is easiest assembled with its back to the floor, before it is lifted into place.
3. Start by laying out the side and middle pieces in front of you. Put wooden dowels E and cam dowel screws F on the inside of the side pieces and both sides of the middle pieces.
4. Low: Get the top and bottom pieces. Start by assembling the unit from its left. Push the top and bottom piece (40 or 80 cm wide depending on your layout) together with the left side. Put cam locks G in the top and bottom pieces. The arrow on the cam lock should be pointing towards the cam dowel screw. Turn the cam lock using a screwdriver ca 180 degrees until it grips and locks the cam dowel screw. The top should be mounted with the cam locks facing up and the bottom with them facing down.
5. High: Get the top, bottom and fixed shelf pieces.

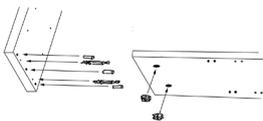

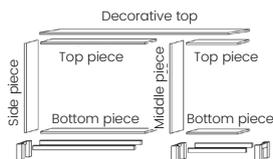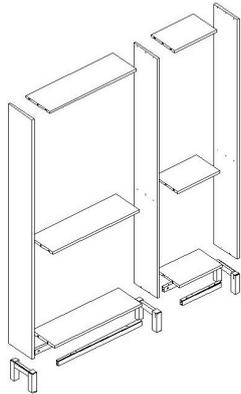

Start by assembling the unit from its left. Push the top, bottom and shelf (40 or 80 cm wide depending on your layout) together with the left side. Put cam locks G in the top, bottom and shelf pieces. The arrow on the cam lock should be pointing towards the cam dowel screw. Turn the cam lock using a screwdriver ca 180 degrees until it grips and lock the cam dowel screw. The top should be mounted with the cam locks facing up and the bottom and the fixed shelf with the cam locks facing down.

6. If the unit is one section wide, push the right side together with the rest of the frame. Fixate with cam locks.
7. If the unit has more than one section, push a middle piece together with the rest of the frame. Fixate with cam locks. Please note the pre drilled holes for hinges should be at the front. Continue adding the sections from left to right. Finish with the right side piece.
8. Low: Mount the decorative top. Place the decorative top with the side you want visible facing down on the floor. Place the unit upside down on top of the decorative top. Measure all sides to get it in the middle. Fasten with screw B in pre drilled countersunk holes.
9. Plinth: Place wooden dowels E in the back of the plinth in the holes that match the bottom piece. The G.A.D label should be facing forward. Push the plinth into place at the front of the frame (to make room for a skirting board at the back). Fasten with screw A.

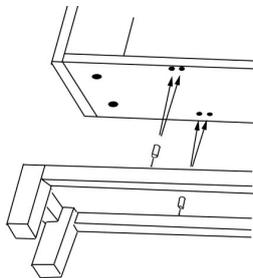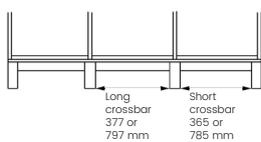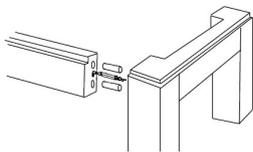


10. Assemble the legs: Screw the legs to the crossbars by placing wooden dowels E and Cam dowel screw F in the legs. Push together the legs and the crossbars. Place Cam lock G in the crossbars and tighten. Make sure the G.A.D label is at the front right.

Please observe that a unit with more than one section of the same with (40 or 80 cm) may have crossbars of different length. Side sections have slightly shorter crossbars than a middle section.


Make sure the legs line up with side and middle pieces. Put wooden dowels E in the top of the assembled leg-“frame” where the holes line up with the ones in the bottom piece. Push the parts together and screw it in place using screw A.

11. Mounting the back piece: Put the unit on the floor with its back facing up. Place the back piece on the unit and make sure it lines up with the sides and the bottom. The side with the pencil lines should be turned up (to the back). Nail the back piece in place using nails D along the pencil lines.
12. Lift the unit up and put it in place.
13. High: The high model of Högklint must be anchored to the wall. Use the angle bracket I. Fasten the angle bracket to the top of the unit using screw C.

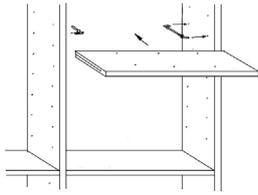

Fasten to the wall using a screw or plug/screw suitable for your type of wall (not enclosed).

14. Place the movable shelves horizontal and vertical in the places according to your drawing. Push the shelf support J into the sides or top/bottom and slide the shelf into place from the front.
15. Place slanted magazine shelves according to your drawing. Put shelf support H in the pre drilled holes. The shelf support at the front should be placed one step lower than the one at the back.
16. Attaching the doors: Remove the hinge plate from the hinge K and screw it to the inside of the unit in pre drilled holes using screw C. The narrow side of the plate should be turned to the front of the unit. Screw the hinge to the door using screw C. Push the door hinges on to the plates until you hear a click sound.

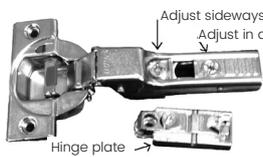

17. Adjustment of doors: The three screws on the hinge enables adjustment of the doors. By turning the screws the position is altered in height, depth and sideways. When the door position is right push a G.A.D cover in place on each hinge to cover the adjustment screws.
18. Place drawers in their intended place.

Högklint

Maintenance

The unit is made from solid birch or oak. The solid wood has a natural look and high quality that makes your unit last for a very long time. Wood is a natural material that changes with season. Sometimes it is easy to move shelves and drawers and sometimes it can be tougher. It depends on the season and the humidity and will change when the weather changes.

The wood is oiled with two coats as standard and is well protected on delivery. A piece of furniture made from solid wood should be maintained regularly to retain its protection and functions. We recommend that you treat your unit about six months after purchase with the oil enclosed and thereafter when the wood feels or looks dry. After a few years the need for more oil will reduce.

A soap treated piece of furniture also needs maintenance. Pour a litre of tepid water into a container and put in a table spoon of soapflakes. Whisk and stir until the soapflakes are dissolved. Dip a rag or sponge in the soapy water and coat the wood. Stains can be removed with a very fine sand paper before applying the soap. Soap mix that is left over can be kept in a container with lid.

Clean the shelf with a dry or moist rag. Many modern rags clean perfectly with just water, otherwise add a drop of liquid soap to your water. To remove tough stains or wash the glass doors bile soap is the best choice for both unit and environment.

If you have any questions about assembly or maintenance please call our customer service at 0046 498 248230 or e-mail info@gad.se.